

Cable Wire Device Connections

Gold/GFI-Cluster

| Cable Wires | Circuit ID Circuit Name | Device Name Terminal Wire Count | Device Type Device Terminal Connection |
|--|---|------------------------------------|--|
| 3A-19 To/From: "Gold/CB-Panel" 14-2/2 | | | |
| White "Neutral" | 3A-49 Gold: Outlet for Dishwasher (GFI In) | "(3A-29) Dishwasher" 1 | GFI, 20A Dead-Front #1 Power In ('Line') / Neutral |
| Black "Hot" | 3A-49 Gold: Outlet for Dishwasher (GFI In) | "(3A-29) Dishwasher" 1 | GFI, 20A Dead-Front #1 Power In ('Line') / Line |
| White/Red "Neutral" | 3A-19 Gold: Outlet for Dishwasher (GFI Out) | "(3A-29) Dishwasher" 1 | GFI, 20A Dead-Front #1 Power Out ('Load') / Neutral |
| Red "Hot" | 3A-19 Gold: Outlet for Dishwasher (GFI Out) | "(3A-29) Dishwasher" 1 | GFI, 20A Dead-Front #1 Power Out ('Load') / Load |
| 3A-53 To/From: "Gold/CB-Panel" 14-2/2 | | | |
| White "Neutral" | 3A-53 Gold: Outlet for Trash Compactor (GFI In) | "(3A-30) Trash Compactor" 1 | GFI, 20A Dead-Front #2 Power In ('Line') / Neutral |
| Black "Hot" | 3A-53 Gold: Outlet for Trash Compactor (GFI In) | "(3A-30) Trash Compactor" 1 | GFI, 20A Dead-Front #2 Power In ('Line') / Line |
| White/Red "Neutral" | 3A-58 Gold: Outlet for Trash Compactor (GFI Out) | "(3A-30) Trash Compactor" 1 | GFI, 20A Dead-Front #2 Power Out ('Load') / Neutral |
| Red "Hot" | 3A-58 Gold: Outlet for Trash Compactor (GFI Out) | "(3A-30) Trash Compactor" 1 | GFI, 20A Dead-Front #2 Power Out ('Load') / Load |
| 3A-59 To/From: "Gold/CB-Panel" 14-2/2 | | | |
| White "Neutral" | 3A-59 Gold: Outlet for Ice Maker (GFI In) | "(3A-32) Ice Maker" 1 | GFI, 20A Dead-Front #3 Power In ('Line') / Neutral |
| Black "Hot" | 3A-59 Gold: Outlet for Ice Maker (GFI In) | "(3A-32) Ice Maker" 1 | GFI, 20A Dead-Front #3 Power In ('Line') / Line |
| White/Red "Neutral" | 3A-60 Gold: Outlet for Ice Maker (GFI Out) | "(3A-32) Ice Maker" 1 | GFI, 20A Dead-Front #3 Power Out ('Load') / Neutral |
| Red "Hot" | 3A-60 Gold: Outlet for Ice Maker (GFI Out) | "(3A-32) Ice Maker" 1 | GFI, 20A Dead-Front #3 Power Out ('Load') / Load |
| 3A-61 To/From: "Gold/CB-Panel" 14-2/2 | | | |
| White "Neutral" | 3A-61 Gold: Outlet for Wine Cooler (GFI In) | "(3A-61) Wine Cooler" 1 | GFI, 20A Dead-Front #4 Power In ('Line') / Neutral |
| Black "Hot" | 3A-61 Gold: Outlet for Wine Cooler (GFI In) | "(3A-61) Wine Cooler" 1 | GFI, 20A Dead-Front #4 Power In ('Line') / Line |
| White/Red "Neutral" | 3A-62 Gold: Outlet for Wine Cooler (GFI Out) | "(3A-61) Wine Cooler" 1 | GFI, 20A Dead-Front #4 Power Out ('Load') / Neutral |
| Red "Hot" | 3A-62 Gold: Outlet for Wine Cooler (GFI Out) | "(3A-61) Wine Cooler" 1 | GFI, 20A Dead-Front #4 Power Out ('Load') / Load |
| 3A-63 To/From: "Gold/CB-Panel" 12-2/2 | | | |
| White "Neutral" | 3A-63 Upper Bar: Outlet for Instant Hot (GFI In) | "(3A-63) Instant Hot" 1 | GFI, 20A Dead-Front #5 Power In ('Line') / Neutral |

Cable Wire Device Connections

Gold/GFI-Cluster

| Cable Wires | Circuit ID Circuit Name | Device Name Terminal Wire Count | Device Type Device Terminal Connection |
|------------------------|---|--|--|
| Black "Hot" | 3A-63 Upper Bar: Outlet for Instant Hot (GFI In) | "(3A-63) Instant Hot" 1 | GFI, 20A Dead-Front #5 Power In ('Line') / Line |
| White/Red "Neutral" | 3A-64 Gold: Outlet for Instant Hot (GFI Out) | "(3A-63) Instant Hot" 1 | GFI, 20A Dead-Front #5 Power Out ('Load') / Neutral |
| Red "Hot" | 3A-64 Gold: Outlet for Instant Hot (GFI Out) | "(3A-63) Instant Hot" 1 | GFI, 20A Dead-Front #5 Power Out ('Load') / Load |